CASCADE elite

Microwave Oven Model: CE2198MO
Owners Manual

IMPORTANT SAFETY INSTRUCTIONS
READ FULLY AND KEEP FOR FUTURE REFERENCE

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.

2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces

3. Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the;

a. Door (bent),

b. Hinges and latches (broken or loosened),

c. Door seals and sealing surfaces.

4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY 2
SPECIFICATIONS 3
BEFORE YOU CALL FOR SERVICE 3
INSTALLATION 4
GROUNDING INSTRUCTIONS 4
IMPORTANT SAFETY INSTRUCTIONS 5
MICROWAVE COOKING PRINCIPALS 6
UTENSILS GUIDE 6
PART NAMES 7
CONTROL PANEL 8
HOW TO SET THE OVEN CONTROLS 9
SETTING THE CLOCK 9
MICROWAVE COOKING 9
GRILL 9
CONVECTION 10
MICROWAVE + GRILL 10
MICROWAVE + CONVECTION 11
DEFROST 11
MULTI-STAGE COOKING 11
ABOUT AUTO-MENU SETTINGS 12
OTHER CONVENIENT FEATURES 13
CLEANING AND CARE 14

SPECIFICATIONS*

Power Consumption:	**230-240V, 50Hz, 1400W (Microwave)**
	1400W (Convection)
	1200W (Grill)
Rated Microwave Output:	**900W**
Operation Frequency:	**2450MHz**
Outside Dimensions:	**310mm(H)×508mm(W)×458mm(D)**
Oven Cavity Dimensions:	**210mm(H)×338mm(W)×348mm(D)**
Oven Capacity:	**25 Litres**
Cooking Uniformity:	**Turntable System {Φ314mm}**
Net Weight:	**Approx. 19kg**

***These specifications are subject to change without notice.**

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed, engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFY THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF

INSTALLATION AND ASSEMBLY

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING**: Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact the qualified service personnel listed on your warranty card
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven**.**
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at the back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.
10. Install the drive disk (4) into the drive socket located in middle of microwave oven floor. **Refer to parts description (Page 7).**
11. Install the roller ring (5) on the microwave oven floor.
12. Fit the glass tray (6) onto the drive disk (4).

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided.

WARNING Improper use of the grounding plug can result in a risk of electric shock.

Note

- If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
- Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are coloured in accordance with the following code:
Green and Yellow = EARTH
Blue = NEUTRAL
Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.
When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean the door and sealing surface of the Microwave Oven.
2. Reorient the receiving antenna of the radio or television.
3. Relocate the Microwave Oven with respect to the receiver.
4. Move the Microwave Oven away from the receiver.
5. Plug the Microwave Oven into a different outlet so that the Microwave Oven and the receiver are on different branch circuits.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance basic safety precautions should be followed, including the following:

WARNING: To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
3. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
4. Do not operate the oven when empty.
5. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. WARNING: When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
7. WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
8. To reduce the risk of fire in the oven cavity:
    a. When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition;
    b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
    c. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
    d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use
9. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
10. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
11. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
12. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
13. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
14. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before consumption in order to avoid burns.
15. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
16. **Only use utensils that are suitable for use in microwave ovens. Utensils should be checked to ensure that they are suitable for use in a microwave oven.**
17. **WARNING**: It is hazardous for anyone other than a competent person to carry out any service or repair operation, that involves the removal of a cover which gives protection against exposure to microwave energy.
18. This product is Group 2 Class B ISM equipment. The definition of Group 2, which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network, which supplies buildings used for domestic purpose.

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during micro-waving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside**.**

UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.
2. Microwave can not penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

Cookware	Microwave	Grill	Convection	Combination*
Heat–Resistant Glass	Yes	Yes	Yes	Yes
Non Heat–Resistant Glass	No	No	No	No
Heat–Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave–Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Grill Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No

Combination: applicable for both "microwave+ grill", and "microwave+ convection" cooking.

PARTS DESCRIPTION

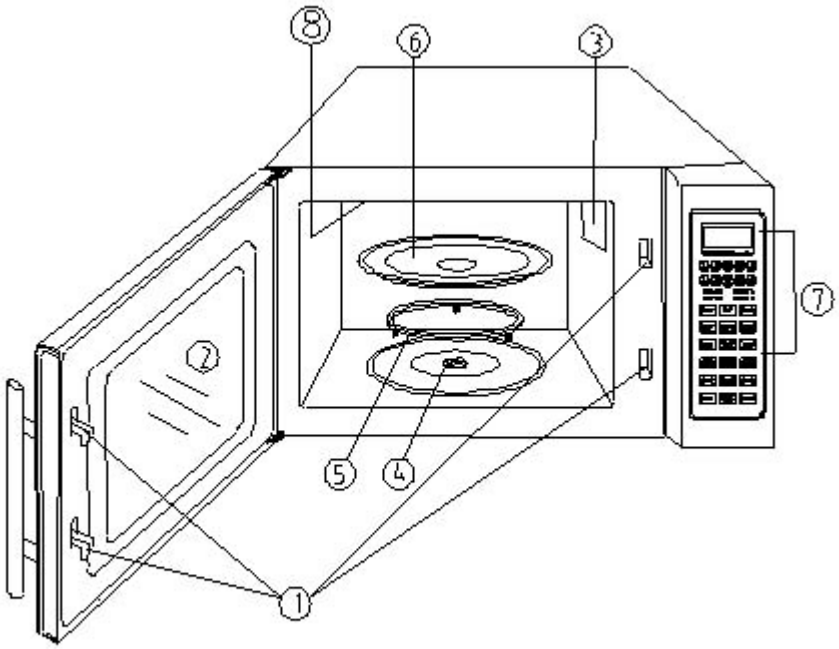

1. Door Safety Lock System
2. Oven Window
3. Oven Air Vent
4. Drive disk
5. Roller Ring
6. Glass Tray
7. Control Panel
8. Grill Heater

CONTROL PANEL

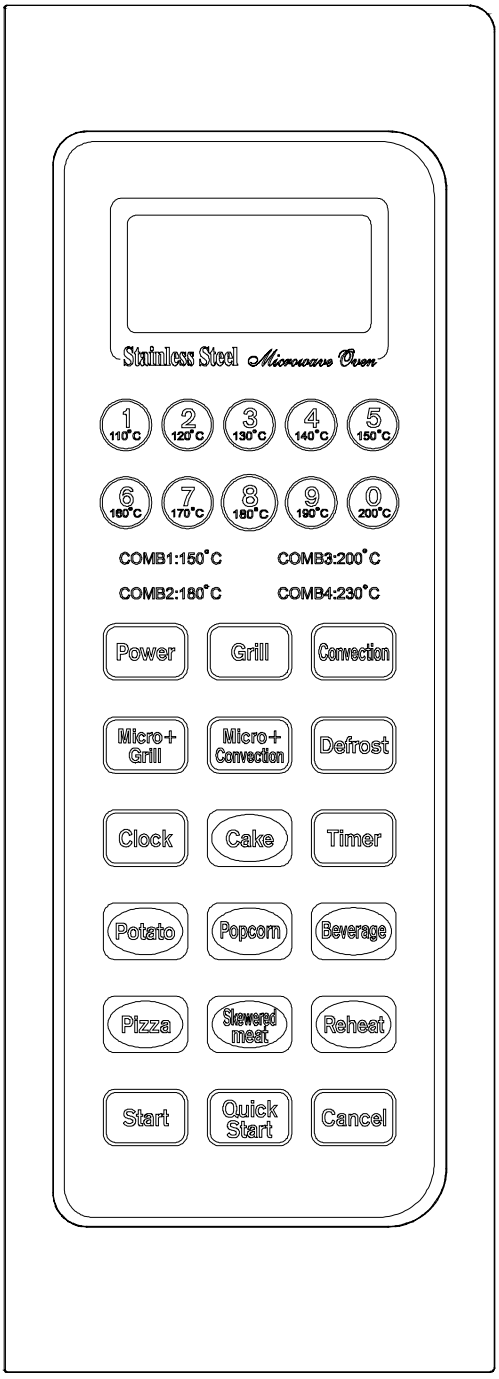

DISPLAY SCREEN

Cooking time, power, indicators and present time are displayed.

POWER

Press to select microwave power level.

GRILL

Press to set a grill-cooking program.

CONVECTION

Press to program convection cooking.

MICRO + GRILL

Press to select one of two combination cooking settings.

MICRO + CONVECTION

Press to select one of four combination cooking settings.

DEFROST

Touch to defrost food.

CLOCK

Use to set the clock

TIMER

Use to set the oven timer

QUICK COOK BUTTONS

CAKE, POTATO, POPCORN, BEVERAGE, PIZZA, SKEWERED MEAT, REHEAT

START

Press to start cooking program.

QUICK START

Touch to start the oven quickly at full power

CANCEL

Touch to stop cooking program or clear all previous settings before cooking starts.

HOW TO SET THE OVEN CONTROLS

BEEPS DURING OVEN SETTINGS

- **ONE BEEP:** Oven accepts the entry.
- **TWO BEEPS:** Oven does not accept the entry. Please check and try again.

SETTING THE CLOCK

When the oven is first plugged in, the display will briefly show “ENTER CLOCK TIME”, you can set the clock time now or later. To set the clock time,

1. Press the CLOCK button.
2. Use the numeric pad (in the natural sequence of time) to enter clock time
3. Press CLOCK to confirm.

MICROWAVE COOKING

Microwave cooking allows you to customise cooking power and time. First, you select a power level by pressing the POWER button a number of times (see the table below). Then you set the cooking time (maximum 99 min. plus 99 sec.) using the numeric pad, before pushing the START button.

Press POWER button to select cooking power		
Press	Power	Description
Once	**100%(P-HI)**	**High**
Twice	**90%(P-90)**	
3 times	**80%(P-80)**	
4 times	**70%(P-70)**	**Medium High**
5 times	**60%(P-60)**	
6 times	**50%(P-50)**	**Medium**
7 times	**40%(P-40)**	
8 times	**30%(P-30)**	**Med. Low/Defrost**
9 times	**20%(P-20)**	
10 times	**10%(P-10)**	**Low**
11 times	**0%(P-00)**	

Example: If you wish to cook for 5 minute at 60% power level.

1. Press POWER button 5 times.
2. Press the numerical pad to enter the cooking time until the correct cooking time (5:00) is displayed.
3. Press the START button.

NOTE:

1. If you want to temporarily stop a cooking session, press the CANCEL button once. You can start the cooking again by pressing START; or press the CANCEL button twice to cancel the cooking program altogether.
2. After the cooking time ends, the system will beep four times and END is displayed. Before starting another cooking session, press the CANCEL button to clear the display and reset the system.

GRILL COOKING

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and melting toppings (e.g. cheese) onto cooked foods.

Suppose you want to program grill cooking for 12 minutes.

1. Make sure the system is reset by pressing the CANCEL button once.
2. Press the GRILL button.
3. Use the numerical pad to enter the cooking time.
4. Press the START button.

NOTE:Grill cooking power is set at full power level by the system. Maximum cooking time for grill is 9:99.

CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and make foods crisp quickly and evenly. This oven can be programmed for ten different cooking temperatures. These preset temperatures are selected by choosing numbers 1-10 on the display panel as per the following guide.

1:110ºC **2:**120ºC **3:**130ºC **4:**140ºC **5:**150ºC
6:160ºC **7:**170ºC **8:**180ºC **9:**190ºC **0:**200ºC

To Cook with Convection

To cook with convection, press the CONVECTION button once and then press the numerical pad to enter the desired convection temperature (as per the above guide), then enter the cooking time.

Suppose you want to cook at 180ºC for 40 minutes.

1. Press the CONVECTION button.
2. Press number 8.
3. Use the numerical pad to enter the cooking time. Press 4 then 0. H 40 will be displayed.
4. Press the START button.

NOTE:

1. The maximum convection cooking time is 9 hours, 99 minutes. After the time has elapsed four beeps sound and END appears on the display. Press CANCEL or open the door to clear the display before starting another cooking function.
2. You can check the convection temperature while cooking is in progress by pressing the CONVECTION button.

To Preheat and Cook with Convection

Your oven can be programmed to combine preheating and convection cooking operations.

Suppose you want to preheat to 170ºC and then cook 35 minutes.

4. Press CONVECTION.
5. Press number 7 to indicate convection temperature 170ºC
6. Press START button. “PREH” will flicker in the display until it reaches the designated temperature. The oven will operate until the temperature is reached. At this point a series of short BEEPS will sound to notify that the temperature has been reached

1. Open the door and place container of food at the center of the turntable.
2. Use the numerical pad to enter the cooking time.
3. Press the START button again to commence cooking.

MICROWAVE +GRILL

This feature allows you to combine grill and microwave cooking on two different preset settings. Press the MICRO+GRILL button once for combination 1 and twice for combination 2. Then at the screen prompt enter the desired cooking time using the numerical pad. After you have pushed the start button, the system begins to count down.

NOTE:

1. The maximum cooking time that can be entered is 99:99
2. During cooking, you can view the programmed setting by pressing the MICRO+GRILL button.

COMBINATION 1

Preset at 30% time for microwave

cooking, and 70% for grill cooking.

Use for fish, potatoes or au gratin.

Suppose you want to set Combination 1 cooking for 25 minutes.

1. Press MICRO+GRILL button once.
2. Use the numerical pad to enter 25:00.
3. Press the START button.

COMBINATION 2

55% time for microwave cooking, 45% for grill cooking. Use for pudding, omelets, baked potatoes and poultry.

Suppose you want to set Combination 2 cooking for 12 minutes.

1. Press MICRO+GRILL button twice.
2. Use the numerical pad to enter 12:00.
3. Press the START button.

MICROWAVE +CONVECTION

Combining microwave and convection cooking allows for rapid fast cooking whilst also browning, as some food items such as chicken and other meats require. This oven has four pre-programmed settings that make it easy to cook with both convection heat and microwave automatically.

Press MICRO+CONVECTION button and then use the numbers 1-4 to program the convection temperature:

	Number pad	Temperature° C
COMB1	**1**	**150**
COMB2	**2**	**180**
COMB3	**3**	**200**
COMB4	**4**	**230**

Suppose you want to bake a cake for 24 minutes on COMB3.

1. Press MICRO+CONVECTION
2. Use the numbers 1-4 to enter the convection temperature. In this case, press number 3.
3. Use the numerical pad to enter the cooking time. In this case, press numbers 2 and 4.
4. Press the START button to start.

NOTE:

The maximum cooking time is 9 hours, 99 minutes. After the time has elapsed four beeps sound and END appears on the display. Press CANCEL or open the door to clear the display before starting another cooking function. You can check the convection temperature while cooking is in progress by pressing the MICRO+CONVECTION button.

DEFROST

Suppose you want to defrost frozen food for five minutes.

1. Press the DEFROST button.
2. Use the numerical pad to enter the defrosting time. In this case, press 5 and double zero.
3. Press the START button.

NOTE:

1. For either raw or previously cooked frozen food the rule of thumb is approximately 8 minutes per pound (17½ minutes per kg).
2. Always stop the oven periodically to remove or separate the portions that are defrosted. If food is not defrosted at the end of the estimated defrosting time, program the oven in 1-minute increments until totally defrosted.
3. When using plastic containers from the freezer, defrost only long enough to remove from plastic in order to place in a microwave-safe dish.
4. The maximum defrosting time is 99 minutes plus 99 seconds. After the time has elapsed four beeps sound and END appears on the display. Press CANCEL or open the door to clear the display before starting another cooking function.

MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences. DEFROST can only be selected before the cooking stage in a program.

Suppose you want to set the following cooking program.

Defrost - Microwave cooking – Convection (without preheat function)

1. Press the DEFROST button.
2. Use the numerical pad to enter the defrosting time.
3. Press POWER to set the power level.
4. Use the numerical pad to enter the cooking time.
5. Press the CONVECTION button.
6. Use the numerical pad to program the convection temperature.
7. Use the numerical pad to enter the convection cooking time.
8. Press the START button

ABOUT AUTO-MENU SETTINGS

"AUTO COOK" allow you to cook or reheat food automatically without entering power level or time.

POTATO

1. Press the POTATO button once or twice for different potato serving sizes. Press once for a 100g potato serving or twice for a 125g potato serving.
2. Use the numbers 1-4 to select the number of servings.
3. Press the START button.

NOTE:
After the cooking program has finished, let the food stand in the oven for 5~10 minutes.
The cooking time quoted here is for reference only. Please always take the cooking timings actually shown on the screen of your oven as the correct settings.

POPCORN

1. Press POPCORN once, the display will show the code and cooking time.
2. Press the START button.

NOTE:
To alter the preset POPCORN time, press POPCORN twice, and use the numerical pad to enter the new popcorn time, then press START button to confirm. The new popcorn time will remain whenever you use the POPCORN function until you reset it.

PIZZA
To reheat one slice of pizza.

1. Press the PIZZA button once
2. Press START button.

To reheat a medium sized pizza.

1. Press the PIZZA button twice.
2. Press the START button

NOTE: Pizza will be soft when cooked using the Microwave function. For crispy pizza, use the Convection function.

SKEWERED MEAT

1. Press SKEWERED MEAT once or twice for skewered meat 100g or 170g per serving.
2. Use the numbers 1-4 to select the number of servings.
3. Press the START button.

NOTE:
At the middle of the cooking time, beeps will remind you to open the door and rearrange the food, and then close the door to cook for the remaining time.

BEVERAGE

1. Press BEVERAGE pad once or twice for beverage 180ml or 250ml per serving.
2. Use the numbers 1-4 to select the number of servings.
3. Press the START button.

REHEAT

1. Press REHEAT pad once, the display will show code and cooking time.
2. Press the START button.

CAKE

1. Press the CAKE button once, the display will show code and cooking time.
2. Press the START button.

To reset CAKE time: press CAKE twice, and use the numerical pad to enter the new cooking time, then press the START button to confirm.
The new cooking time (up to 99:99) will stay whenever you use the CAKE function until you reset it.

OTHER CONVENIENT FEATURES

MINUTE TIMER

To use the timer feature, for example when you need to be reminded of the time in 10 minutes;

1. Press the TIMER button.
2. Use the numeric pad to enter the time to be counted down.
3. Press the START button.

NOTE: When the countdown ends, the system buzzer will sound two long beeps.

The maximum time is 99:99. Time countdown will remain on the display for 3 seconds before the clock or cooking time is returned to the display.

CHILD PROOF LOCK

The childproof lock prevents unsupervised operation of the appliance by children.

To set the child proof lock: Press the CANCEL button for 3 seconds, then a beep will sound and the indicator will show LOCK in the display. In the lock state, all buttons are disabled.

To cancel the child proof lock: Press the CANCEL button for three seconds, then a beep will sound and the display will return to normal.

QUICK START

Use this feature to program the oven to microwave food at 100% power conveniently.

Press the QUICK START button in quick succession to set the cooking time. The maximum cooking time is 10 minutes. The oven will auto-start two seconds after the time is selected.

After the cooking time is complete four beeps will sound and END will appear on the display.

Press CANCEL or open the door to clear the display before starting another cooking function.

TO STOP THE OVEN WHILE THE OVEN IS OPERATING

1. Press the CANCEL button.

You can restart the oven by pressing the START button. Press CANCEL twice to erase all instructions.

2. Open the door. You can restart the oven by closing the door and pressing the START button.

NOTE:

The oven stops operating when door is opened.

CLEANING AND CARE

Turn off the oven and remove the power plug from the wall socket before cleaning.

Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.

The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.

Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.

Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.

If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions. This is normal.

It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm soapy water or in a dishwasher.

The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild soapy water or in a dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.

Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.

When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.

WARNING: The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALLY LIMITED TO 90 DAYS

Type of Appliance: _____
Model No.: CE2198MO Purchase Date:_____
Product Purchased From: _____
Your Name: _____
Address: _____
_____
Phone Number: _____

IMPORTANT!

Please **retain this warranty card along with your purchase receipt**. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.

TECHNICAL ASSISTANCE HELPLINE

Oriental Pacific International Limited
P O Box 302-158 North Harbour
Auckland 1130 New Zealand
New Zealand call 0800 898 580
Email; **service@orientalpacific.com**
Australia call Toll Free 1 800 858 011